
























Original		Rechange		Original		Rechange	
	Standby/On		Power		Select		OK
	Power AUX		Shift + Power		Right		Right
	1 AUX		Shift + 1		Test		Text / Goto
	2 AUX		Shift + 2		Down		Down
	3 AUX		Shift + 3		Return		Back / Return
	4 AUX		Shift + 4		Mute		Mute / Dimmer
	5 AUX		Shift + 5		Vol+		Vol+
	6 AUX		Shift + 6		Vol-		Vol-
	7 AUX		Shift + 7		TV		1
	8 AUX		Shift + 8		DVD		2
	9 AUX		Shift + 9		Sleep		Sleep / Timer
	0 AUX		Shift + 0		AUX		7
	Surround		Eject / Surround		VCR		4
	CH Level		Info / Angle		Stereo		Red / Netflix / Search
	Up		Up		3 Beam		Green / APP / Repeat
	Menu		Menu / Home		5 Beam		Yellow / YouTube / Repeat
	Left		Left		ST+3 Beam		Blue / Prime Video / Random





Original		Rechange		Original		Rechange	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	<<		>> / Tune+				
	>>		l<< / Preset-				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				

