

 
 

 
 
 

 

 
 


 
 
 


 
 
 

 
 
 


 


 



 
 

 

 



 



 


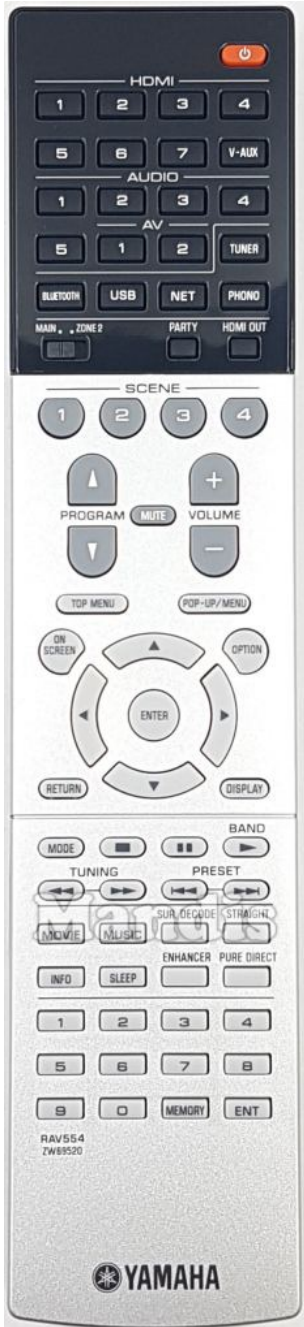
 


 






 













 

 



 




 



 



 
 


Original	Rechange
 Power	 Power
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 6
 HDMI 7	 Shift + 7
 V-AUX	 Shift + 8
 Audio 1	 Shift + 9
 Audio 2	 Shift + Guide
 Audio 3	 Shift + 0
 Audio 4	 Shift + Pre Ch
 Audio 5	 Shift + Options
 AV 1	 Shift + Dual
 AV 2	 Shift + Subt
 Tuner	 TV/R

 
Original	Rechange
 Bluetooth	 Red
 USB	 Green
 NET	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 AV
 Scene 1	 Shift + D. Menu
 Scene 2	 Shift + Text
 Scene 3	 Shift + Eject
 Scene 4	 Shift + AV
 Program Up	 Ch +
 Program Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Shift + Menu
 Pop-Up Menu	 Menu


 


 





Original	Rechange	Original	Rechange
 On Screen	 Eject	 Movie	 3D
 Option	 Options	 Music	 Media
 Return	 Back	 Enhancer	 D. Menu
 Display	 Shift + Info	 Sur Decode	 Dual
 Up	 Up	 Straight	 Subt
 Down	 Down	 Info	 Info
 Right	 Right	 Sleep	 Sleep
 Left	 Left	 Pure Direct	 Text
 Enter	 Ok	 1	 1
 Mode	 Format	 2	 2
 Stop	 Stop	 3	 3
 Pause	 Pause	 4	 4
 Play/Band	 Play	 5	 5
 << Tuning	 <<	 6	 6
 Tuning >>	 >>	 7	 7
 I<< Preset	 I<<	 8	 8
 Preset >>I	 >>I	 9	 9

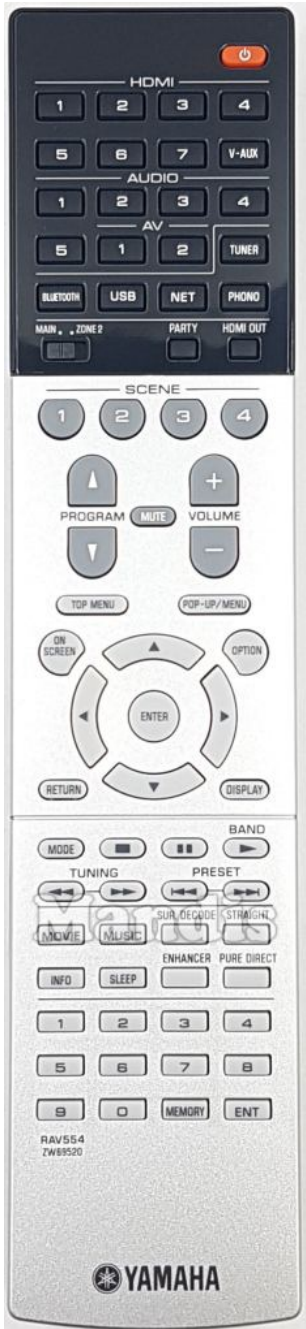 



 



 



Original		Recharge	
	0		0
	ENT		Pre Ch
	Memory		Guide

Original		Recharge	

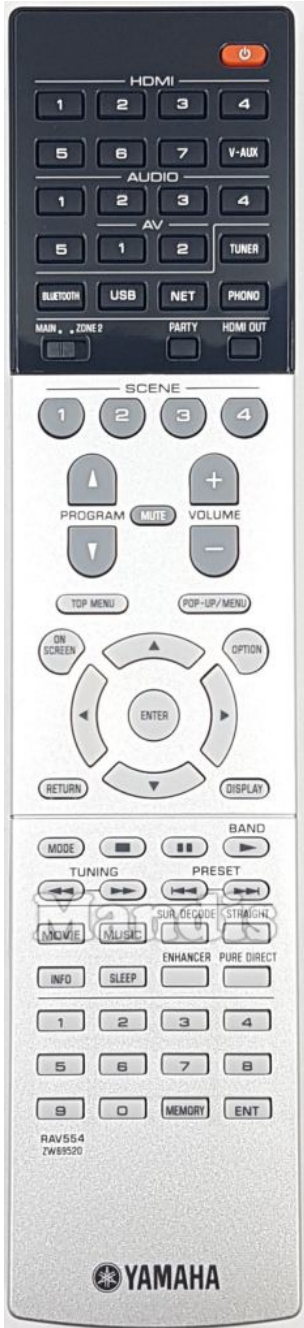 


 


 






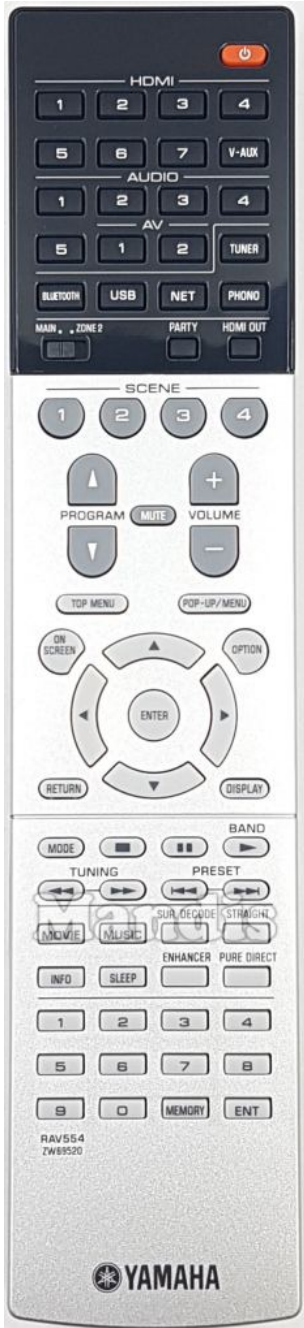

 
 






 









 
 


 



 
 


 


Original	Rechange
 Power	 Power
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 6
 HDMI 7	 Shift + 7
 V-AUX	 Shift + 8
 Audio 1	 Shift + 9
 Audio 2	 Shift + Guide
 Audio 3	 Shift + 0
 Audio 4	 Shift + Pre Ch
 Audio 5	 Shift + Options
 AV 1	 Dual
 AV 2	 Subt
 Tuner	 TV/R

Original	Rechange
 Bluetooth	 Red
 USB	 Green
 NET	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 AV
 Scene 1	 Shift + D. Menu
 Scene 2	 Shift + Text
 Scene 3	 Shift + Eject
 Scene 4	 Shift + AV
 Program Up	 Ch +
 Program Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Shift + Menu
 On Screen	 Eject





Original	Rechange
 Pop-Up Menu	 Menu
 Option	 Options
 Return	 Back
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Format
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<
 Preset >>I	 >>I

Original	Rechange
 Info	 Info
 Sleep	 Sleep
 Enhancer	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Memory	 Guide
 ENT	 Pre Ch

