
 










 

 







Original	Rechange	Original	Rechange
 Power	 Power	 2	 2
 Top	 Back / Return	 3	 3
 On Screen	 Display / Media	 4	 4
 Up	 Up	 5	 5
 Left	 Left	 6	 6
 Enter	 OK	 7	 7
 Right	 Right	 8	 8
 Down	 Down	 9	 9
 Menu	 Menu / Home	 Subtitle	 Subtitle / EQ
 Set Up	 Setup / OPT /	 0	 0
 I<<	 I<< / Preset-	 Audio	 Audio / Lang I/II
 Play	 Play / Slow	 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze	 Repeat	 Green / APP / Repeat
 >>I	 >>I / Preset+	 Repeat A-B	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold		
 USB	 Shift + 8		
 1	 1		

