



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/-	 Shift + Guide / EPG / -/-
 0	 0

Original	Rechange
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Pause / Step / Freeze
 Rec/Auto	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Recharge	Original	Recharge
CH+ / Page+	CH+ / Page+	DTV	Smart / List
Subtitle	Subtitle / EQ	EPG	Guide / EPG / -/-
Vol+	Vol+	Tv/Radio	TV/Radio /
CH-	CH- / Page-		
T.Shift	Setup / OPT /		
Vol-	Vol-		
Play/Pause/Hold	Play / Slow		
Play/Pause/Hold	+ Shift + Stop /		
<</Reveal	<< / Tune-		
>>/Size	Zoom / Size		
>>/Size	>> / Tune+		
Stop/Index	Stop / Hold		
I<<	I<< / Preset-		
S.Page/>>I	>>I / Preset+		
Text	Text / Goto		
FAV	Fav / Marker / PC		
Audio	Audio / Lang I/II		

