









 








 

 














Original	Rechange
 Standby	 Power
 Auto	 Setup / OPT /
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Original	Rechange
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Fav	 Fav / Marker / PC





Original	Recharge
Fav-	SHIFT + [Down Arrow] Shift + Down
Fav+	SHIFT + [Up Arrow] Shift + Up
GUIDE	[EPG] Guide / EPG / -/--
TEXT	[GOTO] Text / Goto
CH List	[LIB] Smart / List
SUBTITLE	[EQ] Subtitle / EQ
TV / Radio	[PROGRAM] TV/Radio /
Media	SHIFT + [MEDIA] Shift + Display / Media
Play / Pause	[SLOW] Play / Slow
Play / Pause	[STEP-FREEZE] Pause / Step / Freeze
<<	[TUNE-] << / Tune-
>>	[TUNE+] >> / Tune+
Rec	[REC MODE] Rec / Rec Mode
Stop	[HOLD] Stop / Hold
I<<	[PRESET-] I<< / Preset-
>>I	[PRESET+] >>I / Preset+
Red	[NETFLIX] Red / Netflix / Search

Original	Recharge
Green	[APP] Green / APP / Repeat
Yellow	[YouTube] Yellow / YouTube / Repeat
Blue	[Prime Video] Blue / Prime Video / Random

