




 





 














Original		Rechange		Original		Rechange	
	Power		Power		Blue / SMode		Shift + Dual
	Mute		Mute		Blue / SMode		Shift + Blue
	Exit		Exit		Up		Up
	Text		Text		Left		Left
	Audio I/II		Dual		Enter		Ok
	Display		Info		Right		Right
	Sleep		Sleep		Down		Down
	P+		Ch +		1		1
	P-		Ch -		2		2
	V+		Vol +		3		3
	V-		Vol -		4		4
	Red / Source		AV		5		5
	Red / Source		Shift + Red		6		6
	Green / TV		Menu		7		7
	Green / TV		Shift + Green		8		8
	Yellow / PMode		Format		9		9
	Yellow / PMode		Shift + Yellow		0		0





Original		Recharge		Original		Recharge	
	-/--	+	Shift + Guide		Stop / FAV -	+	Shift + Left
	Recall		Back		<< / FAV		<<
	Red		Red		<< / FAV		Pre Ch
	Green		Green		>> / FAV+		>>
	Yellow		Yellow		>> / FAV+	+	Shift + Right
	Blue / Repeat		Blue		EPG		Guide
	Blue / Repeat	+	Shift + Text		USB/SD		Media
	Subtitle		Subt		Recorder		Rec
	Pause/Play / Hold		Play		CH.List		List
	Pause/Play / Hold		Pause		TV / Radio		TV/R
	Size		3D				
	Mix		D. Menu				
	Reveal	+	Shift + Info				
	TXT Index		Eject				
	I<< / Subpage		I<<				
	>>I / Lang		>>I				
	Stop / FAV -		Stop				

