

 
 
 


 



 
 

 


 



 

 




 




 

 

 


 



 

 

 

 
 

 
 
 



 




 



 

 





Original		Recharge		Original		Recharge	
	Power		Power		Return		Back
	Source		AV		Up		Up
	1		1		Down		Down
	2		2		Right/Zoom+		Right
	3		3		Left/Zoom-		Left
	4		4		OK		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Info		Info
	9		9		PR+		Ch +
	0		0		PR-		Ch -
	Eco		3D		Text		Text
	Guide		Guide		Subtitle		Subt
	Menu		Menu		List		List
	Exit		Exit		Tv		TV/R
	Option		Options		Red		Red





Original		Rechange		Original		Rechange	
	Green		Green				
	Yellow		Yellow				
	Blue(O) Lang		Blue				

