



 

 

 



 



 

 











 





 





 

 

 

 



 

 

 

 













Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Red / <<		<< / Tune-











 









 

 











 

 













 







 



 

 







Original	Rechange
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>	Blue / Prime Video / Random
Blue / >>	>>  / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [=X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Rechange







Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-



