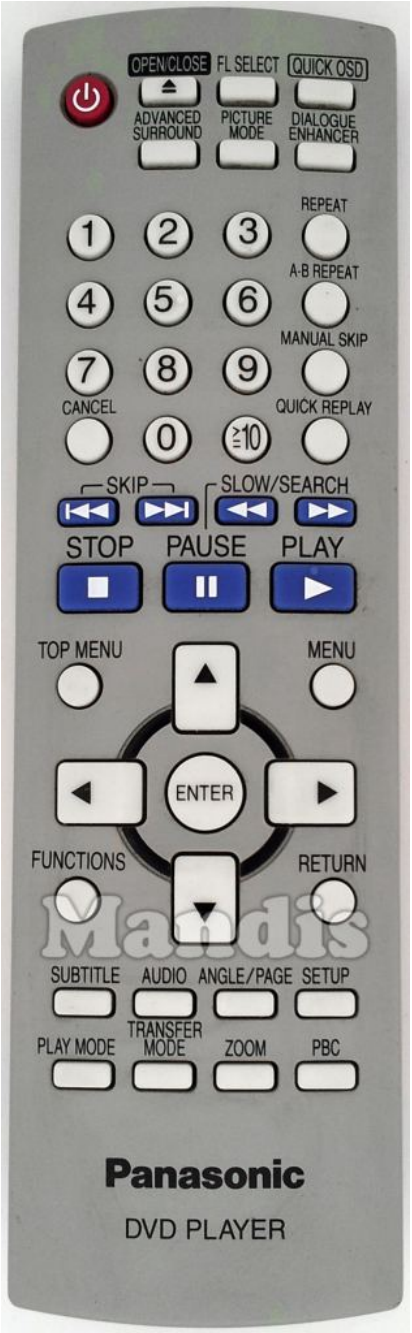


| Original | | Replacement | |
|---|---|---|---|
| | Power | | Power |
| OPEN/CLOSE | Open/Close | ZOOM | Eject |
| FL SELECT | FL Select | ECO 3D | 3D |
| QUICK OSD | Quick OSD | SEARCH TV/R | TV/R |
| ADVANCED SURROUND | Advanced | HOME SMART | Smart |
| PICTURE MODE | Picture Mode | PICTURE FORMAT | Format |
| DIALOGUE ENHANCER | Dialogue | APP MEDIA | Media |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| 0 | 0 | 0 | 0 |

| Original | | Replacement | |
|---|---|---|---|
| ≧10 | +10 | -/-- GUIDE | Guide |
| CANCEL | Cancel | CLEAR EXIT | Exit |
| REPEAT | Repeat | REPEAT TEXT | Text |
| A-B REPEAT | A-B Repeat | A | Red |
| MANUAL SKIP | Manual Skip | B | Green |
| QUICK REPLAY | Quick Replay | C | Yellow |
| SKIP | I<< Skip | I<< | I<< |
| SKIP | Skip >>I | >>I | >>I |
| SLOW/S | << Slow/Serach | << | << |
| SEARCH | Slow/Search >> | >> | >> |
| STOP | Stop | | Stop |
| PAUSE | Pause | | Pause |
| PLAY | Play | PLAY MODE | Play |
| TOP MENU | Top Menu | SHIFT + TOP MENU MENU | Shift + Menu |
| MENU | Menu | TOP MENU MENU | Menu |
| FUNCTIONS | Functions | E-MANUAL D.MENU | D. Menu |
| RETURN | Return | RETURN BACK | Back |

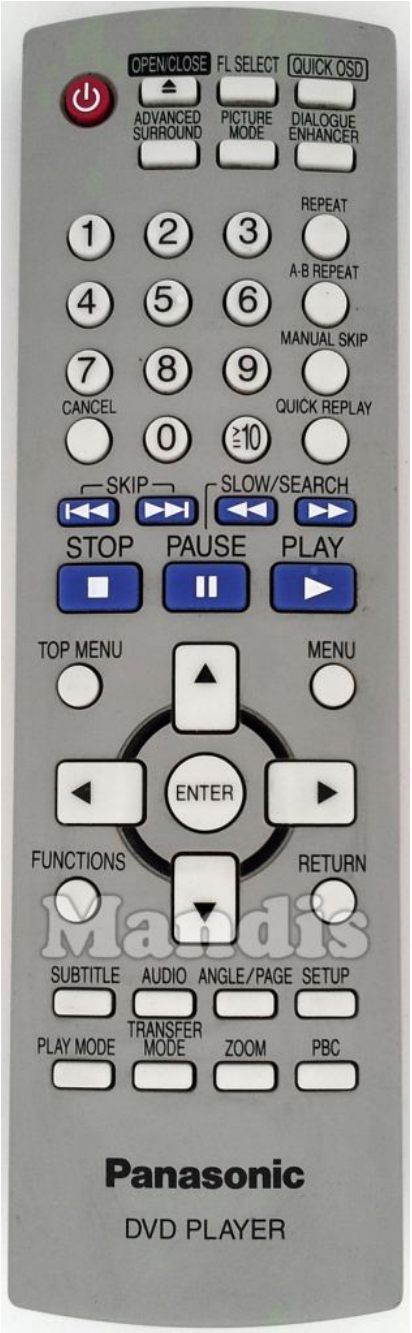


| Original | | Replacement | | Original | Replacement |
|---|---|---|---|---|---|
| | Up | | Up | | |
| | Down | | Down | | |
| | Right | | Right | | |
| | Left | | Left | | |
| ENTER | Enter | OK | Ok | | |
| SUBTITLE | Subtitle | AD SUBT | Subt | | |
| AUDIO | Audio | SOUND DUAL | Dual | | |
| ANGLE/PAGE | Angle/Page | DISPLAY INFO | Info | | |
| SETUP | Setup | SETTINGS OPT | Options | | |
| PLAY MODE | Play Mode | SHIFT + | PLAY MODE Shift + Play | | |
| TRANSFER MODE | Transfer Mode | DISC NAV LIST | List | | |
| ZOOM | Zoom | SHIFT + | ZOOM Shift + Eject | | |
| PBC | PBC | TIMER AV | AV | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |