Mandis shop

Yamaha RAS21

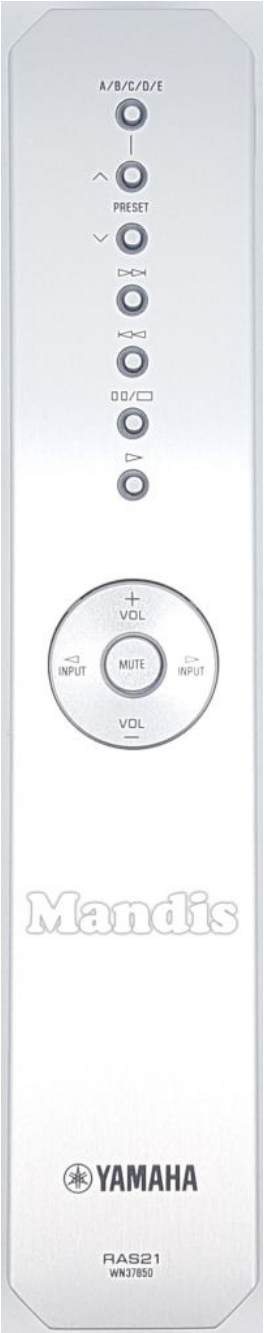

Original	Replacement
A/B/C/D/E	Smart
Preset Up	Ch +
Preset Down	Ch -
>>I	>>I
I <<	I <<
Stop	Stop
Pause	Pause
Play	Play
Vol +	Vol +
Vol -	Vol -
Mute	Mute
Input >	Right
< Input	Left

Original	Replacement

https://telecomands.be/Yamaha/1025368-replacement-remote-control-for-Yamaha-RAS21-WN37850.htm