Mandis shop

RC- 123

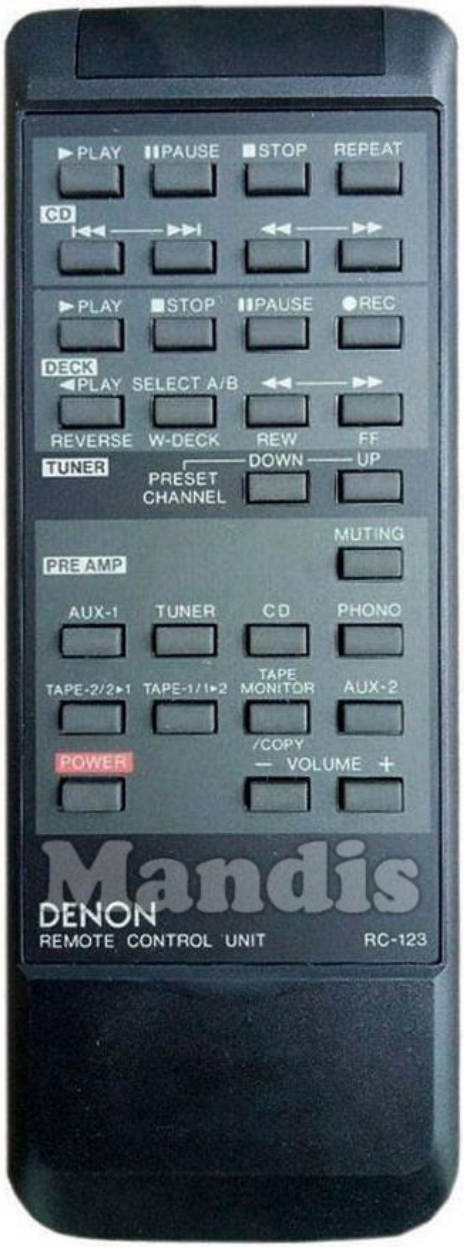

Original		Replacement		Original	Replacement
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
AUX-1	AUX 1	TV 1	1		
TUNER	TUNER	TUNER 6	6		
CD	CD	CD - STB 3	3		
PHONO	PHONO	AUX - HDD 7	7		
TAPE-2/2▸1	TAPE 2 / 2 > 1	TAPE 5	5		
TAPE-1/1▸2	TAPE- 1 / 1 > 2	DVD 2	2		
AUX-2	AUX 2	VIDEO 4	4		
POWER	Power		Power		
– VOLU	Volume-	VOL –	Vol -		
LUME +	Volume+	+ VOL	Vol +		

https://telecommands.be/en/Denon/10831-9360-replacement-remote-control-for-Denon-RC123.htm