Mandis shop

Yamaha VQ08630

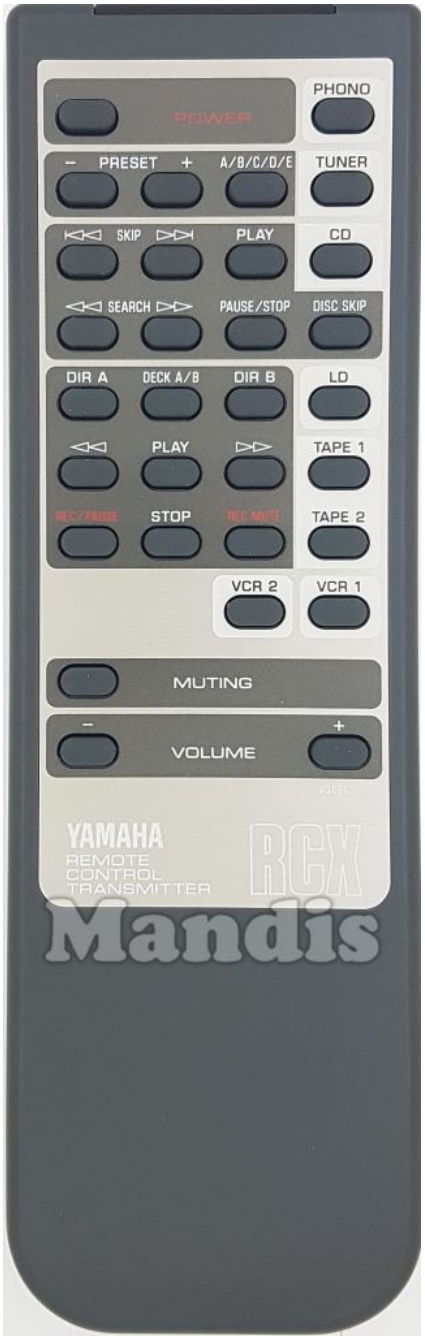

Original	Replacement
Power	Power
Phono	Red
Tuner	Green
CD	Yellow
LD	Blue
Tape 1	1
Tape 2	2
VCR 1	3
VCR 2	4
A/B/C/D/E	Smart
Preset +	Ch +
Preset -	Ch -
I<< Skip CD	I<<
Skip >>I CD	>>I
Play CD	Play
<< Search CD	<<
Search >> CD	>>

Original	Replacement
Pause/Stop CD	Pause
Disc Skip CD	Media
Dir A	Guide
Deck A/B	0
Dir B	Pre Ch
<<	Left
Play	Ok
>>	Right
Stop	Up
Rec Pause	Down
Rec Mute	Rec
Volume+	Vol +
Volume-	Vol -
Muting	Mute

https://telecomands.com/Yamaha/1687-873-replacement-remote-control-for-Yamaha-VQ08630.htm