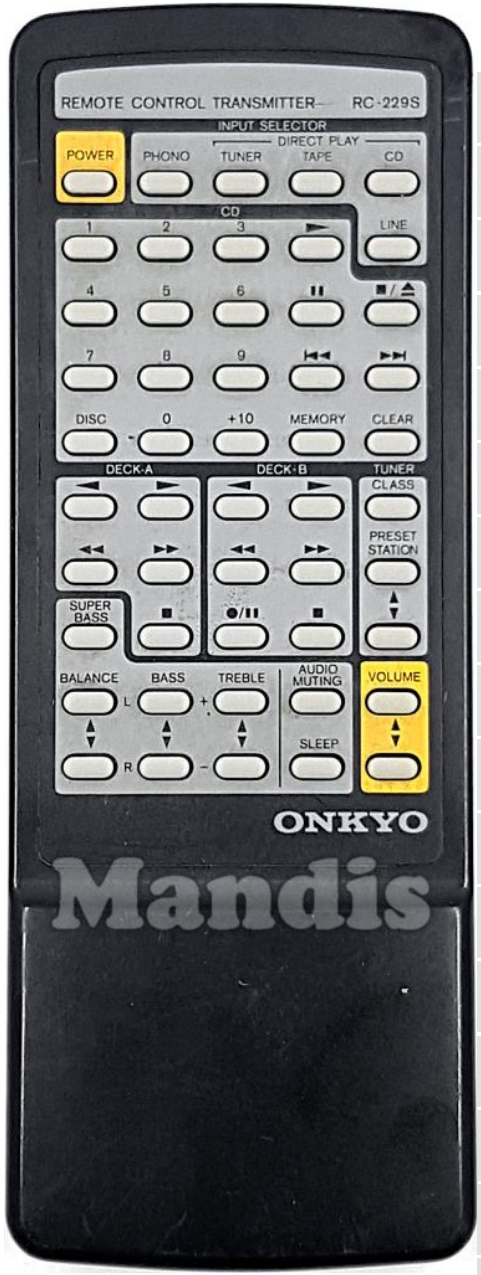


| Original | | Rechange | |
|---|---|---|---|
| POWER | Power | | Power |
| AUDIO MUTING | Audio Muting | DIMMER MUTE | Mute / Dimmer |
| | Play CD | SLOW | Play / Slow |
| | Pause CD | STEP-FREEZE | Pause / Step / Freeze |
| | Stop/Eject CD | HOLD | Stop / Hold |
| | I<< CD | PRESET- | I<< / Preset- |
| | >>I CD | PRESET+ | >>I / Preset+ |
| SUPER BASS | Superbass | TITLE SOUND | Sound / Title |
| DISC | Disc | EQ SUBTITLE | Subtitle / EQ |
| | Stop/Eject CD | SURROUND | Eject / Surround |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| CLASS | Class | HOME MENU | Menu / Home |
| | Deck A >> | | Up |
| MEMORY | Memory | ANGLE INFO | Info / Angle |
| | < Deck A | | Left |
| | Stop Deck A | OK | OK |
| | Deck A > | | Right |

| Original | | Rechange | |
|---|---|---|---|
| CLEAR | Clear | CLEAR EXIT CANCEL | Exit / Cancel / Clear |
| | << Deck A | | Down |
| VOLUME | Volume+ | VOL + | Vol + |
| BALANCE | Balance L/Up | LIST SMART | Smart / List |
| PRESET STATION | Preset Station | CH PAGE + | CH+ / Page+ |
| | Volume- | VOL − | Vol - |
| | Balance R/Down | MEDIA DISPLAY | Display / Media |
| | Preset Station | CH PAGE − | CH- / Page- |
| 1 | 1 | TV 1 | 1 |
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD-STB 3 | 3 |
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |

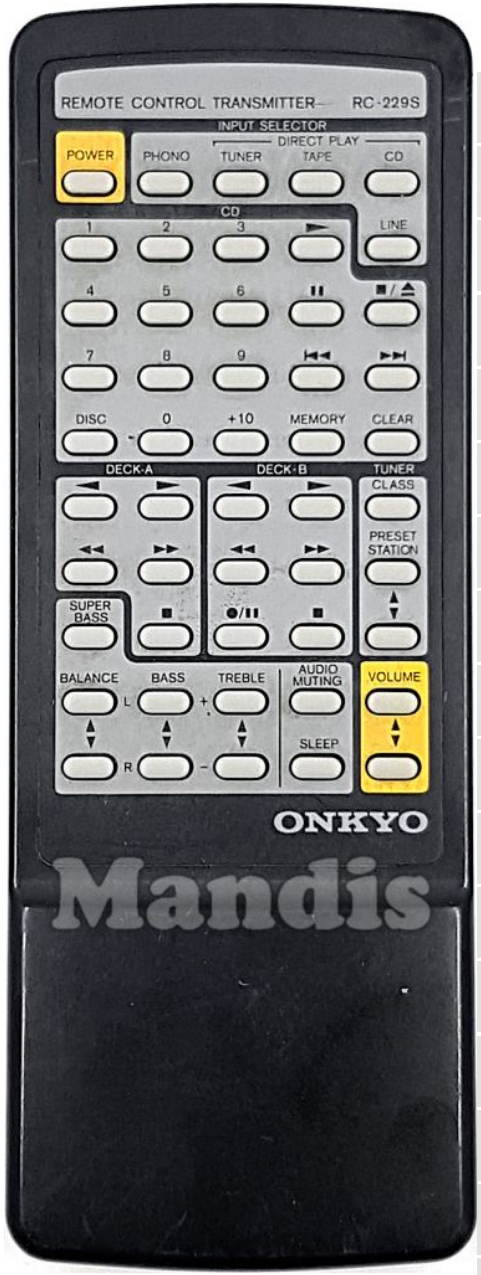


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| +10 — +10 | GUIDE EPG — Guide / EPG / -/-- | TAPE — Tape | SHIFT + TAPE 5 — Shift + 5 |
| 0 — 0 | HDMI - SAT 0 — 0 | TUNER — Tuner | SHIFT + TUNER 6 — Shift + 6 |
| Bass- | NETFLIX SEARCH — Red / Netflix / Search | | |
| BASS — Bass+ | APP REPEAT — Green / APP / Repeat | | |
| Treble- | YouTube REPEAT A-B — Yellow / YouTube / Repeat | | |
| TREBLE — Treble+ | Prime Video RANDOM — Blue / Prime Video / Random | | |
| Rec/Pause Deck B | SHIFT + REC MODE — Shift + Rec / Rec Mode | | |
| Preset Station | SHIFT + PRESET- — Shift + I<< / Preset- | | |
| PRESET STATION — Preset Station | SHIFT + PRESET+ — Shift + >>I / Preset+ | | |
| Deck B >> | SHIFT + ▲ — Shift + Up | | |
| < Deck B | SHIFT + ◀ — Shift + Left | | |
| Stop Deck B | SHIFT + OK — Shift + OK | | |
| Deck B > | SHIFT + ▶ — Shift + Right | | |
| << Deck B | SHIFT + ▼ — Shift + Down | | |
| LINE — Line | SHIFT + TV 1 — Shift + 1 | | |
| PHONO — Phono | SHIFT + DVD 2 — Shift + 2 | | |
| CD — CD | SHIFT + CD - STB 3 — Shift + 3 | | |