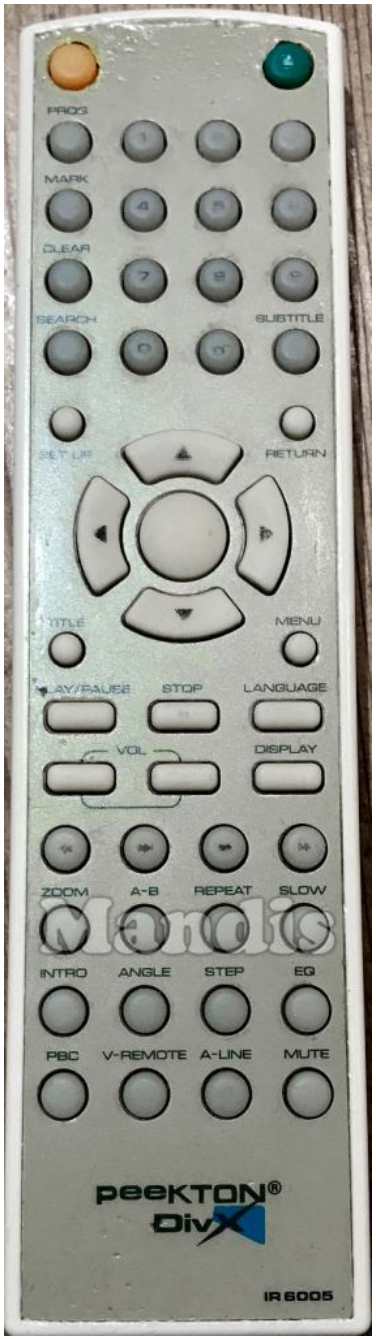

Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	Open / Close	SURROUND	Eject / Surround	RETURN	Return	RETURN BACK	Back / Return
	1	TV 1	1		Left		Left
	2	DVD 2	2		Enter	OK	OK
	3	CD - STB 3	3		Right		Right
MARK	Mark	PC FAV MARKER	Fav / Marker / PC	TITLE	Title	TITLE SOUND	Sound / Title
	4	VIDEO 4	4		Down		Down
	5	TAPE 5	5	MENU	Menu	HOME MENU	Menu / Home
	6	TUNER 6	6	PLAY/PAUSE	Play/Pause	SLOW	Play / Slow
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear	STOP	Stop	HOLD	Stop / Hold
	7	AUX - HDD 7	7	LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
	8	USB 8	8	VOL	Vol -	VOL	Vol -
	9	BLUETOOTH 9	9	VOL	Vol +	VOL	Vol +
	0	HDMI - SAT 0	0	DISPLAY	Display	MEDIA DISPLAY	Display / Media
	10+	-/-- GUIDE EPG	Guide / EPG / -/--		I<<	PRESET-	I<< / Preset-
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ		>>I	PRESET+	>>I / Preset+
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /		<<	TUNE-	<< / Tune-

Tools

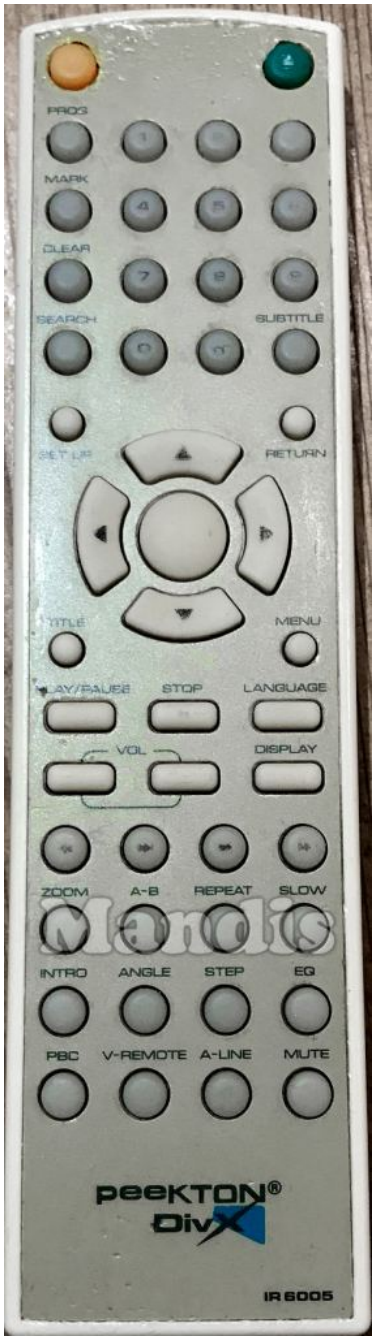

Original		Rechange		Original		Rechange
	>>	TUNE+	>> / Tune+			
ZOOM	Zoom	SIZE ZOOM	Zoom / Size			
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat			
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat			
ANGLE	Angle	ANGLE INFO	Info / Angle			
MUTE	Mute	DIMMER MUTE	Mute / Dimmer			