Mandis shop

Samsung AH59-00134B

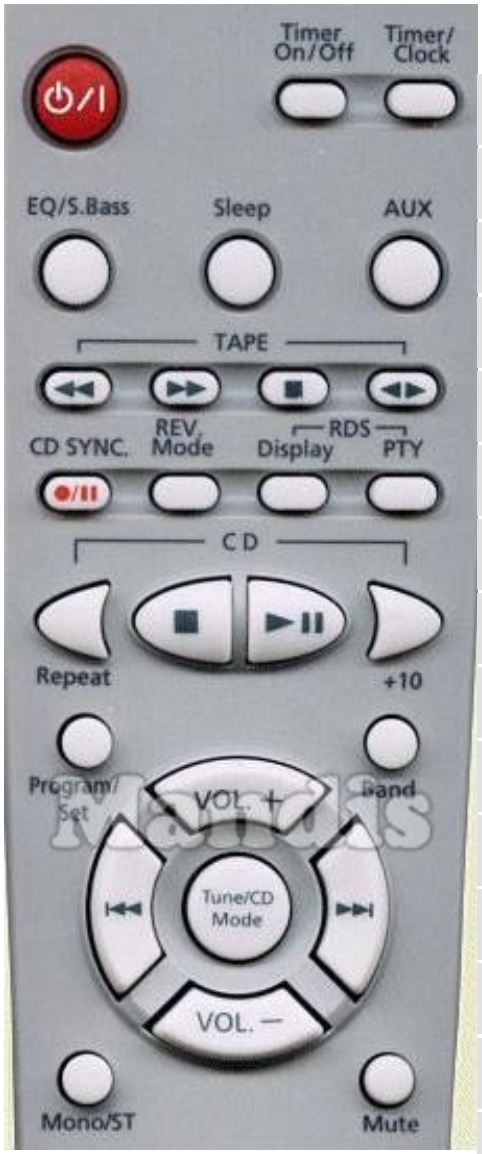

Original	Rechange	Original	Rechange
POWER	Power	>>I CD, TUN UP	Last
PROGRAM/SET	MEDIA	PLAY/PAUSE CD	Play
MUTE	MUTE	MONO/ST	Audio
CD SYNC, REC	Rec	TIMER ON/OFF	V-FOR
BAND	VOD	<< TAPE	Rewind
REPEAT	INFO	STOP CD	Stop
EQ/S.BASS	SRC	>> TAPE	Fast Forward
SLEEP	EXIT	<> TAPE	Pause
TUNE/CD Mode	P/C / FAV	REV MODE	Red (A)
I << CD, TUN	First	AUX	MENU
+10	-/-- / EPG		
DISPLAY RDS	TV/R		
STOP TAPE	Yellow (C)		
VOL+	VOL +		
TIMER/CLOCK	WIDE		
PTY RDS	Subt.		
VOL-	VOL -		

https://telecommande-rechange.com/Samsung/1036-882-telecommande-de-remplacement-pour-Samsung/AH59-00134B.htm