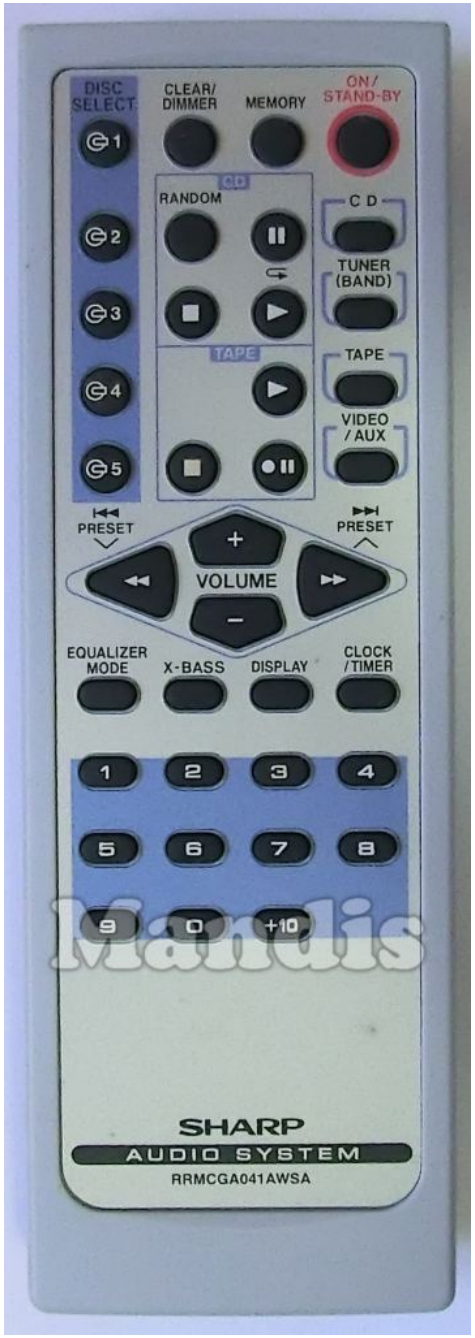

Original		Rechange	
ON/STAND-BY	On/Standby		Power
MEMORY	Memory	HOME SMART	Smart
CLEAR/DIMMER	Clear/Dimmer	CLEAR EXIT	Exit
CD	CD	C	Yellow
TUNER (BAND)	Tuner/Band	B	Green
TAPE	Tape	D	Blue
VIDEO / AUX	Video/AUX	A	Red
DISC SELECT 1	Disc Select 1	PROG SLEEP	Sleep
2	Disc Select 2	SEARCH TV/R	TV/R
3	Disc Select 3	PICTURE FORMAT	Format
4	Disc Select 4	ECO 3D	3D
5	Disc Select 5	E-MANUAL D.MENU	D. Menu
RANDOM	Random CD	APP MEDIA	Media
	Pause CD		Pause
	Stop CD		Stop
	Play CD	PLAY MODE	Play
	Play Tape	OK	Ok

Original		Rechange	
	Stop Tape		Up
	Rec/Pause Tape		Down
+ VOLUME	Vol +	+ VOL	Vol +
VOLUME –	Vol -	VOL –	Vol -
PRESET	>>/>>I Preset/Up	+ CH	Ch +
PRESET	<<I/<<	CH –	Ch -
EQUALIZER MODE	Equalizer Mode	SOUND DUAL	Dual
X-BASS	X-Bass	AD SUBT	Subt
DISPLAY	Display	DISPLAY INFO	Info
CLOCK /TIMER	Clock/Timer	TIMER AV	AV
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7

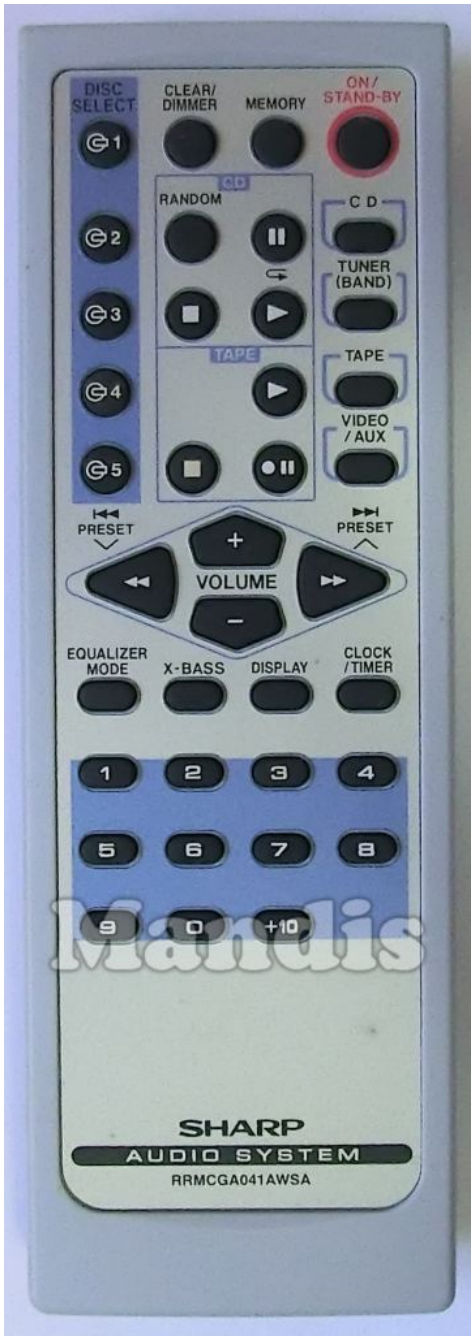

Original		Rechange	
8	8	8	8
9	9	9	9
0	0	0	0
+10	+10	GUIDE	Gui de

Original	Rechange