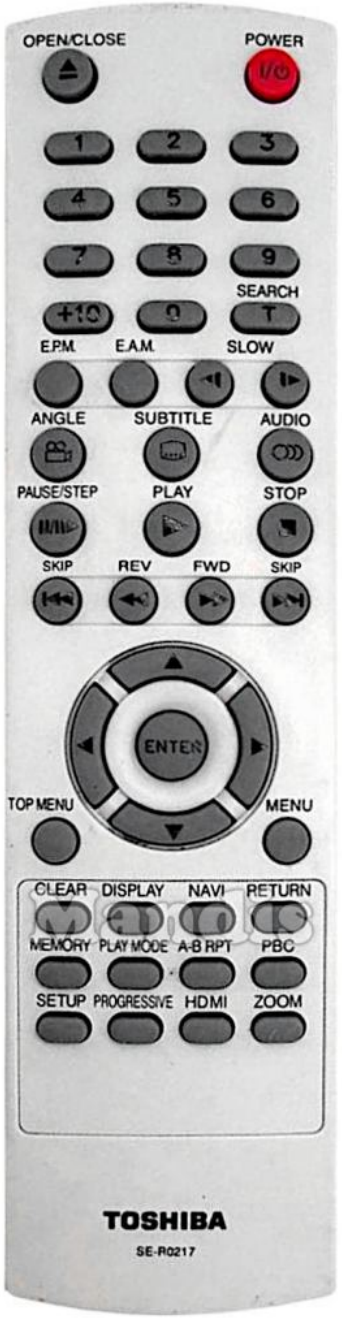

Original		Rechange	
OPEN/CLOSE	Open/Close	SURROUND	Eject / Surround
POWER	Power		Power
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+10	10	-/-- GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
SEARCH T	T/Search	NETFLIX SEARCH	Red / Netflix / Search
E.P.M.	EPM	FORMAT PICTURE	Picture / Format
E.A.M.	EAM	TITLE SOUND	Sound / Title
SLOW	<I Slow	CH PAGE −	CH- / Page-

Original		Rechange	
SLOW	Slow I>	+ CH PAGE	CH+ / Page+
ANGLE	Angle	ANGLE INFO	Info / Angle
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
PAUSE/STEP	Pause/Step	STEP - FREEZE II	Pause / Step / Freeze
PLAY	Play	SLOW	Play / Slow
STOP	Stop	HOLD	Stop / Hold
SKIP	I<< Skip	PRESET-	I<< / Preset-
REV	<<REV	TUNE-	<< / Tune-
FWD	FWD/>>	TUNE+	>> / Tune+
SKIP	Skip >>I	PRESET+	>>I / Preset+
	Up		Up
	Left		Left
ENTER	Enter	OK	OK
	Right		Right
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
	Down		Down

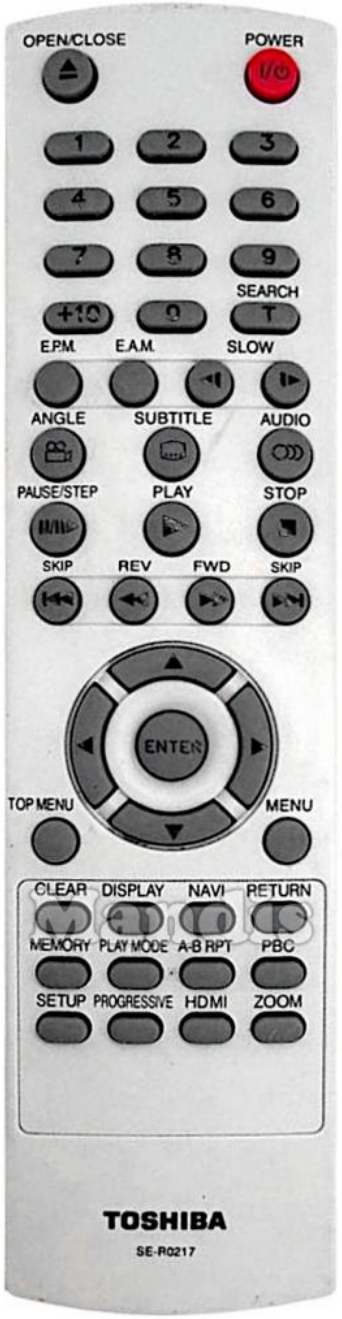

Original		Rechange		Original	Rechange
MENU	Menu	HOME MENU	Menu / Home		
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear		
DISPLAY	Display	MEDIA DISPLAY	Display / Media		
NAVI	Navi	LIST SMART	Smart / List		
RETURN	Return	RETURN BACK	Back / Return		
MEMORY	Memory	PC FAV MARKER	Fav / Marker / PC		
PLAY MODE	Play Mode	SHIFT + SLOW ▶	Shift + Play /		
A-B RPT	A-B RPT	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
PBC	PBC	Prime Video RANDOM	Blue / Prime Video / Random		
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /		
PROGRESSIVE	Progressive	GOTO TEXT	Text / Goto		
HDMI	HDMI	SHIFT + HDMI - SAT 0	Shift + 0		
HDMI	HDMI	RDS AV INPUT	AV / Input / RDS		
ZOOM	Zoom	SIZE ZOOM	Zoom / Size		