Mandis shop

Yamaha VQ08630

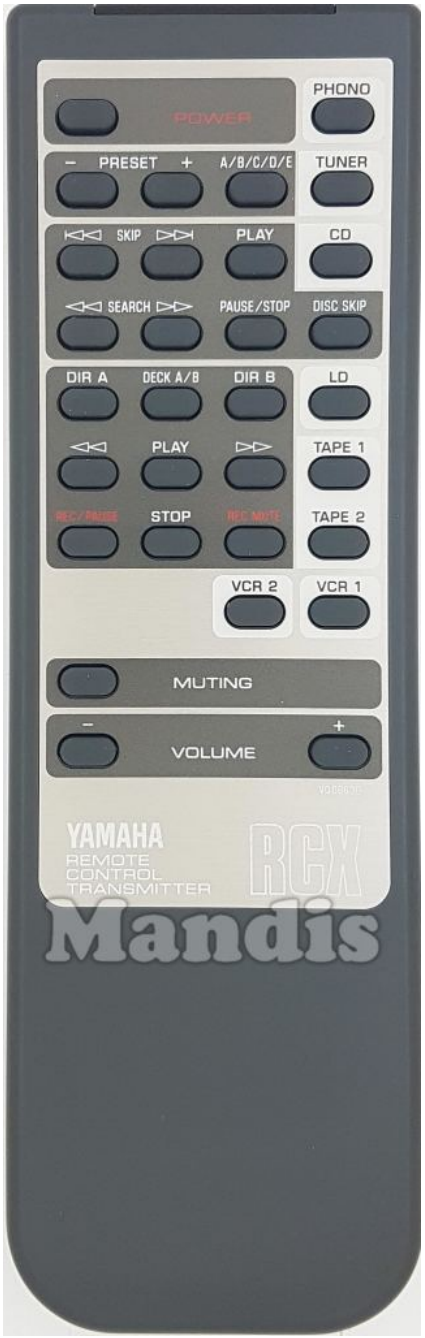

Original		Rechange	
POWER	Power		Power
PHONO	Phono	A	Red
TUNER	Tuner	B	Green
CD	CD	C	Yellow
LD	LD	D	Blue
TAPE 1	Tape 1	1	1
TAPE 2	Tape 2	2	2
VCR 1	VCR 1	3	3
VCR 2	VCR 2	4	4
A/B/C/D/E	A/B/C/D/E	HOME SMART	Smart
PRESET +	Preset +	+ CH	Ch +
PRESET -	Preset -	CH −	Ch -
SKIP	I<< Skip CD	I<<	I<<
SKIP	Skip >>I CD	>>I	>>I
PLAY	Play CD	PLAY MODE ▶	Play
SEARCH	<< Search CD	<<	<<
SEARCH	Search >> CD	>>	>>

Original		Rechange	
PAUSE/STOP	Pause/Stop CD	II	Pause
DISC SKIP	Disc Skip CD	APP MEDIA	Media
DIR A	Dir A	-/-- GUIDE	Guide
DECK A/B	Deck A/B	0	0
DIR B	Dir B	FAV PRE-CH	Pre Ch
<<	<<	◀	Left
PLAY	Play	OK	Ok
>>	>>	▶	Right
STOP	Stop	▲	Up
REC/PAUSE	Rec Pause	▼	Down
REC MUTE	Rec Mute	REC MODE ●	Rec
VOLUME +	Volume+	+ VOL	Vol +
VOLUME -	Volume-	VOL −	Vol -
MUTING	Muting	MUTE	Mute

https://telecommande-mandis.be/fr/Yamaha/1687-873-telecommande-de-replacement-pour-Yamaha-VQ08630-VQ08630.htm